


CAUTION: RKF-Max Rough-In Kit - Low voltage prewire cable length should be a minimum of 84" from the point of entry into the Back Box.



CAUTION: RKF-Large Rough-In Kit - Low voltage prewire cable length should be a minimum of 72" from the point of entry into the Back Box.

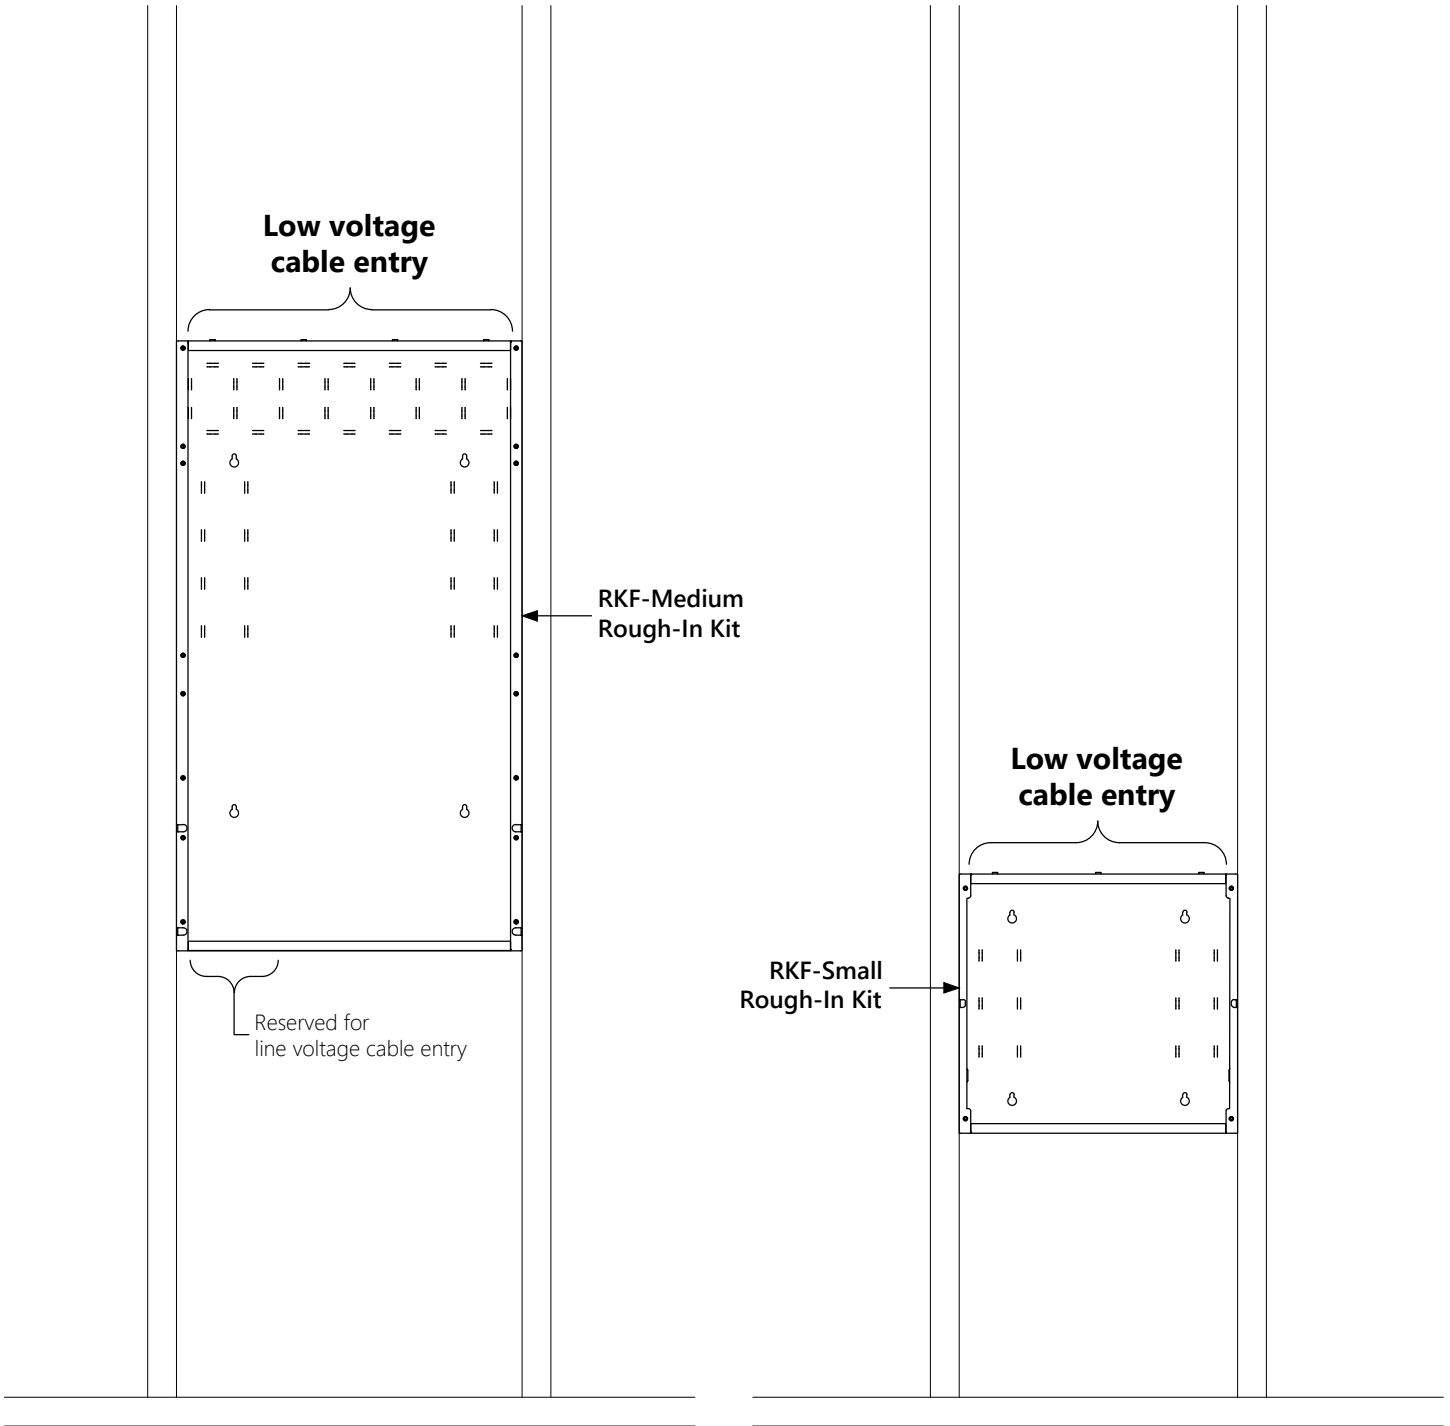

CAUTION: RKF-Medium Rough-In Kit - Low voltage prewire cable length should be a minimum of 60" from the point of entry into the Back Box.



CAUTION: RKF-Small Rough-In Kit - Low voltage prewire cable length should be a minimum of 48" from the point of entry into the Back Box.